

SEAL REPAIR KITS AND SEAL OPTIONS

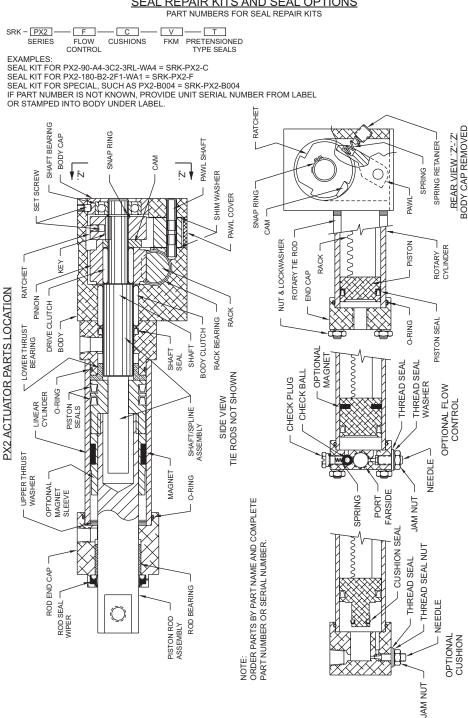



11 Sunshine Blvd. Ormond Beach, Fl. 32174 Phone: 386/676-6377 Fax: 386/676-6379 Email: sales@rotomation.com Website: www.rotomation.com

 
PX2 NITPICKER ACTUATOR INSTALLATION AND SETUP

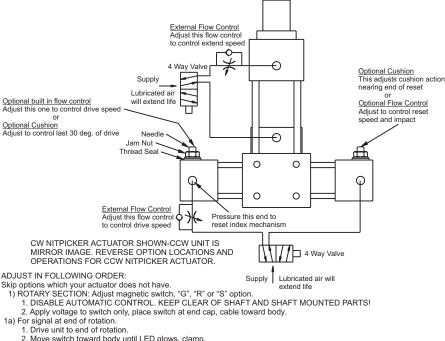

- 2. Move switch toward body until LED glows, clamp.
- 3. Set flow controls for low speed.
- 4. Cycle to check operating point, adjust as required.
- 1b) For signal before end of rotation. 1. Apply low pressure (5 psi for standard seals) to
 - cylinder being set.
 - 2. Position shaft to switching point.
 - 3. Move switch toward body until LED glows, clamp.
 - 4. Set flow controls for low speed.
 - 5. Cycle to check operating point, adjust as required.
- 2) LINEAR SECTION: Adjust magnetic switch, "G", "R" or "S" option.
- 1. Adjust linear speed with external flow controls or reduce line pressure.
- 2a) For signal at end of stroke.
- 1. Remove air pressure & place rod at end of stroke.
- 2. Adjust switch inward from end cap until LED glows, clamp.
- 2b) For intermediate point of signal.
 - 1. Follow above procedure with load positioned at desired operating point.
 - 2. Cycle to check operating point, adjust as required.



SENSE RETRACT



ccw(a)cw

SENSE EXTEND

SINGLE RACK

ACTUATOR

SENSE

RESET

3) To adjust speed "F" option.

Flow controls may be built in ("F" option) or external (not supplied by Rotomation, Inc.)

To adjust built in controls:

- Loosen jam nut.
- 2. Tighten needle to reduce speed, loosen to increase speed. Make small adjustments.
- 3. Tighten jam nut while holding needle steady.
- 4) Adjust Cushion "C" option.
 - 1. Loosen jam nut.
- 2. Tighten needle to increase stiffness of cushion, loosen to decrease.
- 3. Tighten jam nut while holding needle steady.

SWITCH LEADS

OPTION I FAD

GL. RL. SL 9', end stripped

Connection option GC, RC, SC 6" pigtail with male connector


EXTENSION CABLES (PURCHASE SEPARATELY)

PART NUMBER DESCRIPTION

Standard Lead

CC2 2 m cable, female connector one end, stripped other end. CC5 5 m cable, female connector one end, stripped other end

- KEEP MAGNETIC MATERIAL AWAY -**SENSING**

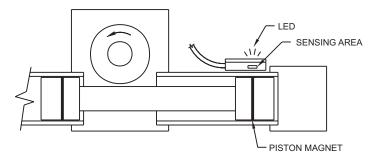


APPROACHING PISTON MAGNET ACTIVATES SENSOR, OPERATES SWITCH AND LED. PLACE SWITCH AS CLOSE AS POSSIBLE TO END CAP FOR CORRECT OPERATING POSITION


SWITCH MOUNTING

TIE ROD CLAMP

STRAP CLAMP

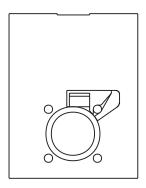


SERIES PX2 ROTARY

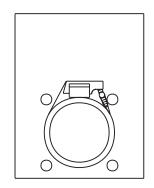


SERIES PX2 LINEAR

TIGHTEN STRAP CLAMP TO HOLD SWITCH STABLE. DO NOT DISTORT SWITCH CASE.

ROTOMATION REED SWITCH - OPTION G

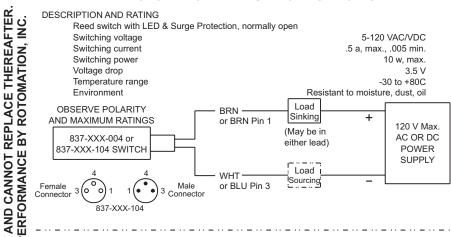

ROTOMATION SINKING (NPN) SWITCH - OPTION R

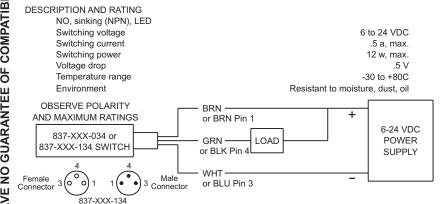

ROTOMATION SOURCING (PNP) SWITCH - OPTION S

